

## Function List of pq\_TLS\_2010 Diagnostic system TOYOTA / LEXUS / SCION

**Supported Version: North America (NA)**

Vehicle Name	Year
4Runner	1992~2011
Avalon	1995~2011
AVANZA	2007~2010
Camry	1992~2011
Camry HV	2007~2011
CARB Mode	
Celica	1990~2005
Corolla	1993~2011
Cressida	1989~1992
Echo	2000~2005
ES250	1990~1991
ES300	1992~2003
ES330	2004~2006
ES350	2007~2011
FCHV-adv	2009~2009
FJ Cruiser	2007~2011
GS300	1993~2006
GS350	2007~2011
GS400	1998~2000
GS430	2001~2007
GS450H	2007~2011
GS460	2008~2011
GX460	2010~2011
GX470	2003~2009
Hiace	2006~2011
Highlander	2001~2011
Highlander HV	2006~2011
Hilux	2004~2011
HPL	2011~2011
HS250h	2010~2011
iQ	2011~2011
IS F	2008~2010
IS250	2006~2011
IS250C	2010~2011
IS300	2001~2005
IS350	2006~2011
IS350C	2010~2011
Land Cruiser	1993~2011
LFA	2011~2011
LS400	1990~2000
LS430	2001~2006
LS460	2007~2010
LS600H	2008~2010
LX450	1996~1997

**Function List of pq\_TLS\_2010 Diagnostic system  
TOYOTA / LEXUS / SCION**

**Supported Version: North America (NA)**

<b>Vehicle Name</b>	<b>Year</b>
LX470	1998~2007
LX570	2008~2011
Matrix	2003~2011
MR2	1991~1995
MR2 Spyder	2000~2005
Paseo	1993~1999
Previa	1991~1997
Prius	2001~2010
Rav4	1996~2011
Rav4 EV	1999~2003
RUSH	2009~2009
RX300	1999~2003
RX330	2004~2006
RX350	2007~2011
RX400H	2006~2008
RX450h	2010~2011
SC300	1992~2000
SC400	1992~2000
SC430	2002~2010
Sequoia	2001~2011
Sienna	1998~2011
Solara	1999~2009
Supra	1989~1998
T100	1993~1998
Tacoma	1995~2011
tC	2005~2011
Tercel	1993~1999
Truck	1992~1995
Tundra	2000~2011
Venza	2009~2010
xA	2004~2006
xB	2004~2011
xD	2008~2011
Yaris	2004~2011

**Function List of pq\_TLS\_2010 Diagnostic System  
TOYOTA / LEXUS / SCION**

**UPDATE : 2010/10/12**

**Software Version : V1.19**

<b>Plug</b>	<b>Classification</b>	<b>Name of System</b>	<b>DTC</b>	<b>Live Data</b>	<b>Actuator</b>	<b>Customize</b>	<b>Utility</b>
DLC1/DLC2	Powertrain	ECT	0	-	-	-	-
DLC1/DLC2	Powertrain	Engine	0	0	-	-	-
DLC1/DLC2	Chassis	ABS	0	-	-	-	-
DLC1/DLC2	Chassis	AIR SUSPENSION	0	0	0	-	-
DLC1/DLC2	Chassis	Cruise Control	0	-	-	-	-
DLC1/DLC2	Chassis	EMS	0	-	-	-	-
DLC1/DLC2	Chassis	TRAC	0	-	-	-	-
DLC1/DLC2	Body	AIR CONDITIONER	0	-	-	-	-
DLC1/DLC2	Body	Side Airbag	0	-	-	-	-
DLC3	Powertrain	Battery	0	0	0	-	0
DLC3	Powertrain	CARB ECU	0	0	-	-	-
DLC3	Powertrain	Cruise Control	0	0	-	-	-
DLC3	Powertrain	E-ACM	0	0	0	-	-
DLC3	Powertrain	ECT	0	0	0	-	⊙
DLC3	Powertrain	Engine	0	0	0	-	-
DLC3	Powertrain	Engine and ECT	0	0	0	-	0
DLC3	Powertrain	EV	0	0	0	-	-
DLC3	Powertrain	FC	-	-	0	-	-
DLC3	Powertrain	FCHV	-	-	0	-	-
DLC3	Powertrain	HV Battery	0	0	0	-	⊙
DLC3	Powertrain	Hybrid Control	0	0	0	-	0
DLC3	Powertrain	Laser Cruise	0	0	-	-	0
DLC3	Powertrain	Radar Cruise / Laser Cruise	0	0	-	-	0
DLC3	Powertrain	Sequential M/T	0	0	0	-	0
DLC3	Chassis	4WD	0	0	0	-	0
DLC3	Chassis	ABS	0	0	0	-	-
DLC3	Chassis	ABS/TRC/VSC	0	0	0	-	0
DLC3	Chassis	Advanced Parking Guidance System	0	⊙	-	-	-
DLC3	Chassis	AHC/EMS/AIRSUS	0	0	0	-	0
DLC3	Chassis	Air suspension	0	0	0	-	0
DLC3	Chassis	EHPS / EMPS	0	0	-	-	0
DLC3	Chassis	EPB	0	0	0	-	0
DLC3	Chassis	Front Stabilizer	0	0	0	-	-

**Function List of pq\_TLS\_2010 Diagnostic System  
TOYOTA / LEXUS / SCION**

**UPDATE : 2010/10/12**

**Software Version : V1.19**

<b>Plug</b>	<b>Classification</b>	<b>Name of System</b>	<b>DTC</b>	<b>Live Data</b>	<b>Actuator</b>	<b>Customize</b>	<b>Utility</b>
DLC3	Chassis	KDSS	0	0	⊙	-	⊙
DLC3	Chassis	Lane Keeping Assist	0	0	-	-	0
DLC3	Chassis	P_CTRL	0	0	-	-	-
DLC3	Chassis	P_CTRL	0	0	-	-	-
DLC3	Chassis	Rear Stabilizer	0	0	0	-	-
DLC3	Chassis	Stabilizer	0	0	-	-	0
DLC3	Chassis	Tire Pressure Monitor	0	0	-	⊙	0
DLC3	Chassis	VGRS	0	0	-	-	0
DLC3	Body	A/C	0	0	0	0	0
DLC3	Body	Accessory Gateway	0	0	-	-	-
DLC3	Body	AFS / HL AutoLeveling	0	0	0	-	0
DLC3	Body	AIR CONDITIONER	0	0	0	0	0
DLC3	Body	Back Door	0	0	0	0	-
DLC3	Body	Back Door P/W	0	0	0	0	-
DLC3	Body	BACK-DOOR	0	0	0	0	-
DLC3	Body	BODY No.2	⊙	0	0	0	-
DLC3	Body	Body No.3	0	0	0	0	-
DLC3	Body	Body No.4	0	0	0	0	-
DLC3	Body	Body No.5	⊙	0	0	⊙	-
DLC3	Body	BODY/GATEWAY	0	0	0	0	-
DLC3	Body	Center Console Switch	-	0	0	-	-
DLC3	Body	CLEARANCE SONER	0	0	0	0	0
DLC3	Body	COMBI SW	-	0	-	0	-
DLC3	Body	Combination Meter	⊙	0	0	0	-
DLC3	Body	Combination Switch	-	0	-	-	-
DLC3	Body	D-DOOR	0	0	0	0	-
DLC3	Body	D-Door Motor	0	0	0	-	-
DLC3	Body	Driver Seat	⊙	0	0	0	-
DLC3	Body	D-SEAT	-	0	0	0	-
DLC3	Body	D-SEAT SW	⊙	0	⊙	-	-
DLC3	Body	ECB Gateway	0	0	-	-	-
DLC3	Body	ECM Gateway	0	0	-	-	-
DLC3	Body	Electric Power Control	0	0	0	-	-

**Function List of pq\_TLS\_2010 Diagnostic System  
TOYOTA / LEXUS / SCION**

**UPDATE : 2010/10/12**

**Software Version : V1.19**

<b>Plug</b>	<b>Classification</b>	<b>Name of System</b>	<b>DTC</b>	<b>Live Data</b>	<b>Actuator</b>	<b>Customize</b>	<b>Utility</b>
DLC3	Body	Entry & Start	0	0	0	0	0
DLC3	Body	Front Left Seat A/C	0	0	0	-	-
DLC3	Body	Front Right Seat A/C	0	0	0	-	-
DLC3	Body	GATEWAY	0	0	0	0	-
DLC3	Body	Gateway CAN	0	-	-	-	-
DLC3	Body	HV Gateway	0	0	-	-	-
DLC3	Body	IG_CTRL	0	0	0	-	-
DLC3	Body	IMMOBILISER/STEERING LOCK	0	⊙	⊙	-	⊙
DLC3	Body	Intuitive P/A	0	0	0	0	-
DLC3	Body	Main Body	0	0	0	0	-
DLC3	Body	MASTER SW	-	0	0	0	-
DLC3	Body	Master Switch	0	0	-	-	-
DLC3	Body	Mayday Gateway	0	0	-	-	-
DLC3	Body	Mirror / Driver Door	⊙	0	0	0	-
DLC3	Body	Mirror L	⊙	0	0	-	-
DLC3	Body	Mirror R	⊙	0	0	-	-
DLC3	Body	MIRROR/MIRROR-R	-	0	0	0	-
DLC3	Body	MIRROR-L	-	0	0	0	-
DLC3	Body	Navigation System	0	-	-	-	-
DLC3	Body	Night View	0	0	0	-	-
DLC3	Body	OCCUPANT DETECTION	0	0	-	-	0
DLC3	Body	P Master Switch	-	0	0	-	-
DLC3	Body	Passenger Door	0	0	0	-	-
DLC3	Body	Passenger Seat	⊙	0	0	0	-
DLC3	Body	PCS WIL L	0	0	0	-	-
DLC3	Body	PCS WIL R	0	0	0	-	-
DLC3	Body	P-DOOR	0	0	0	0	-
DLC3	Body	PM1 Gateway	0	0	-	-	-
DLC3	Body	PM2 Gateway	0	0	-	-	-
DLC3	Body	Power Source Control	0	0	0	-	-
DLC3	Body	Pre-Collision	0	0	0	-	-
DLC3	Body	PRE-CRASH	0	0	0	-	-
DLC3	Body	Pre-Crash 2	0	0	0	-	⊙

**Function List of pq\_TLS\_2010 Diagnostic System  
TOYOTA / LEXUS / SCION**

**UPDATE : 2010/10/12**

**Software Version : V1.19**

<b>Plug</b>	<b>Classification</b>	<b>Name of System</b>	<b>DTC</b>	<b>Live Data</b>	<b>Actuator</b>	<b>Customize</b>	<b>Utility</b>
DLC3	Body	P-SEAT	-	0	0	-	-
DLC3	Body	Rain Sensor	⊙	0	-	-	-
DLC3	Body	Rear Console Switch	0	0	0	-	-
DLC3	Body	Rear Left Door	0	0	0	0	-
DLC3	Body	Rear Left Seat	0	0	0	0	-
DLC3	Body	Rear Left Seat A/C	0	0	0	-	-
DLC3	Body	Rear Right Door	0	0	0	0	-
DLC3	Body	Rear Right Seat	0	0	0	0	-
DLC3	Body	REAR-SEAT SW	-	0	-	-	-
DLC3	Body	Remote Engine Starter	0	0	-	0	0
DLC3	Body	RL-DOOR	0	0	0	0	-
DLC3	Body	RL-Door Motor	0	0	0	0	-
DLC3	Body	RL-SEAT	-	0	0	-	-
DLC3	Body	RR-DOOR	0	0	0	0	-
DLC3	Body	RR-Door Motor	0	0	0	0	-
DLC3	Body	RR-SEAT	-	0	0	-	-
DLC3	Body	RTRCTBL HARDTOP	0	0	⊙	0	-
DLC3	Body	SLIDE ROOF	-	0	0	0	-
DLC3	Body	Sliding Roof	0	0	0	0	-
DLC3	Body	SMART	0	0	0	0	0
DLC3	Body	SRS AIRBAG	0	⊙	-	-	-
DLC3	Body	SRS Airbag	0	0	-	-	-
DLC3	Body	Starting Control	0	0	0	-	-
DLC3	Body	STEERING PAD	-	0	-	-	-
DLC3	Body	Steering Pad Switch	-	0	-	-	-
DLC3	Body	T&T	0	0	0	0	-
DLC3	Body	TDS	0	0	0	0	⊙
DLC3	Body	Telematics	0	0	-	-	-
DLC3	Body	TILT&TELESCO	0	0	0	0	-
DLC3	Body	WIL Gateway	0	0	-	-	-
DLC3	Body	Wiper	-	0	0	0	-

**Function List of pq\_TLS\_2010 Diagnostic System  
TOYOTA / LEXUS / SCION**

**UPDATE : 2010/10/12**

**Software Version : V1.19**

<b>Plug</b>	<b>Classification</b>	<b>Name of System</b>	<b>DTC</b>	<b>Live Data</b>	<b>Actuator</b>	<b>Customize</b>	<b>Utility</b>
-------------	-----------------------	-----------------------	------------	------------------	-----------------	------------------	----------------

- : N/A

O : Available

© : It depends on the model.

## Utility List

**Supported Version: North America (NA)**

ECU Name	Function Name	Utility
ABS/VSC/TRAC	Air Bleeding	0
ABS/VSC/TRAC	Reset Memory	0
ABS/VSC/TRAC	Test Mode	-
ABS/VSC/TRAC	ECB Utility	0
ABS/VSC/TRAC	ABS History	-
ABS/VSC/TRAC	Inspection Mode	0
ABS/VSC/TRAC	Signal Check	0
AFS	Steering Sensor Initialization	0
AFS	ECU Information Sync	0
AHC	Height Offset	0
AHC	Signal Check	0
Air Conditioner	Servomotor Initialization	0
Air Conditioner	Rear Cooling Unit Check	0
Air suspension	Height Offset	0
Air suspension	Signal Check	0
Battery	System Calibration	0
Battery	Battery Discharge	0
Battery	Discharge Data Monitoring	-
ECT	Reset Memory	0
ECT	A/T Code Registration	-
ECT	A/T Code Reset	0
ECT	Check Mode	0
EHPS	Signal Check	0
Electric Parking Brake	Reset Memory	0
EMPS	Torque Sensor Adjustment	0
EMPS	Abnormal Operation History	0
EMPS	Torque Sensor Adjustment	0
EMPS	Torque Sensor Adjustment	0
EMPS	Signal Check	0
EMS	Signal Check	0
Engine	All Readiness	0
Engine	VIN	0
Engine	Shift Control Synchronization	-
Engine	Evaporative System Check	-
Engine	Check Mode	0
Engine and ECT	Reset Memory	0
Engine and ECT	All Readiness	0
Engine and ECT	VIN	0
Engine and ECT	Evaporative System Check	-
Engine and ECT	Reset Memory	-
Engine and ECT	Check Mode	0
Four Wheel Drive	Reset Memory	0
Four Wheel Drive	Signal Check	0
HV Battery	Initialization	0
Hybrid Control	Initialization	0
Hybrid Control	Reset Memory	0



## Utility List

### Supported Version: North America (NA)

ECU Name	Function Name	Utility
Hybrid Control	B1 Air Bleeding	-
Hybrid Control	Inspection Mode	O
Hybrid Control	VIN	-
Immobiliser	Transponder Code Registration	-
Immobiliser	Transponder Code Erasure	◎
Immobiliser	Key Registration	-
Intuitive P/A	Steering Initialization	O
KDSS	Sensor Adjustment	O
KDSS	Signal Check	O
Lane Departure Alert	Camera/Target Position Memory	O
Lane Departure Alert	Camera Axis Adjust	O
Lane Keeping Assist	Camera/Target Position Memory	O
Lane Keeping Assist	Camera Axis Adjust	O
Laser Cruise	Laser/Radar Cruise Initialization	O
Laser Cruise	Beam Axis Adjustment	O
Occupant Detection	Sensitivity Check	O
Power Source Control	Auto Power OFF Cancel	-
Pre-Collision 2	Camera/Target Position Memory	O
Pre-Collision 2	Camera Axis Adjust	O
Pre-Collision 2	Recog ECU H Temp Hist Reset	O
Radar Cruise	Beam Axis Adjustment	O
Radar Cruise	Laser/Radar Cruise Initialization	O
Radar Cruise	Beam Axis Adjustment	O
Remote Engine Starter	Trouble Factor Code Clear	O
Sequential M/T	Parts Exchange	O
Smart Access	Smart Code Erasure	O
Smart Key	Key Code Erasure	O
Smart Key	Smart Code Erasure	O
SRS Airbag	Signal Check	O
Stabilizer	Stabilizer System Check	O
Steering Lock	Transponder Code Erasure	O
Tire Pressure Monitor	ID Registration	O
Tire Pressure Monitor	Signal Check	O
VGRS	Signal Check	O
VGRS	Steering Angle Adjust	O
VGRS	Abnormal Operation History	O
VGRS	Steering Angle Adjust	O

- : N/A

O : Available

◎ : It depends on the model.

## Customized List

Customization category name	Customization name
Wireless Door Lock	Open Door Warning
Wireless Door Lock	Hazard Answer Back
Wireless Door Lock	Wireless Buzzer Vol
Wireless Door Lock	Wireless Control
Wireless Door Lock	Car Finder Function
Wireless Door Lock	Panic Function
Wireless Door Lock	Int/Light ON/Unlock
Wireless Door Lock	Unlock 2 Operation
Wireless Door Lock	Trunk Lid Operation
Wireless Door Lock	Auto Lock Time
Wireless Door Lock	Back Door Open
Wireless Door Lock	Open Door Warn
Wireless Door Lock	P/W DOWN w/ transmitter
Wireless Door Lock	P/W UP w/ transmitter
Wireless Door Lock	Wireless Buzzer Volume
Wireless Door Lock	Wireless Operation Switch
Wireless Door Lock	Panic Alarm Function
Wireless Door Lock	Wireless Unlock/ 2 Times Operations
Wireless Door Lock	Wireless Trunk Lid Operation
Wireless Door Lock	Auto Lock Time Delay
Wireless Door Lock	Wireless Buzzer Resp
Door Lock	Unlock /Park
Door Lock	All Unlock/Open-Close
Door Lock	Unlock Key Twice
Door Lock	Auto Lock
Door Lock	Auto Lock Specification
Door Lock	Auto Lock/ Shift
Door Lock	Lock W/Shift P-except P Brake Release
Door Lock	Speed Autolock (Once)
Door Lock	All Unlock w/ D door open-close
Door Lock	IG ON Parking Unlock
Door Lock	D-Seat 2Operation Unlock
Door Lock	Lock Shift Brake
Door Lock	Double Lock Set
Security	Warning by Glass Sen
Security	Answer Back
Security	Passive Mode
Security	Warning Operation Time
Security	Warning by Horn
Security	Entry Delay Time
Security	Intrusion Sensor
Security	Warning by Glass Broken Sensor
Security	Passive Mode (Security System)
Security	Armed State Indicator
Power Window	P/W Down W/ Transmit
Power Window	P/W Up W/ Transmit

## Customized List

Customization category name	Customization name
Power Window	Door Key P/W Up
Power Window	Door Key P/W Down
Power Window	Down/Door Key
Power Window	Up/Door Key
Power Window	Down/Back Door Key
Power Window	Up/Back Door key
Power Window	Door Trigger P/W Control
Power Window	Down/Wireless
Power Window	Up/Wireless
Wiper	Rewipe Function
Wiper	Speed Mode
Wiper	Rear Speed Mode
Wiper	Rear Wiper Speed
Wiper	Rear Rewipe Time
Wiper	Rear Wiper Function
Wiper	Rear Wiper Washer
Wiper	Rear Wiper in Reverse
Wiper	Int Operate Time
Wiper	Rewipe Time
Wiper	Rewipe Control
Wiper	Auto Wiper
Wiper	Angle Mode
Wiper	R-Linked Wiper
Wiper	Re-wiper Control
Wiper	Re-wiper Time
Wiper	Re-wiper Function
Illuminated Entry	Lighting Time
Illuminated Entry	I/L ON w/door key Unlock
Illuminated Entry	I/L when ACC OFF
Illuminated Entry	Battery Saver
Illuminated Entry	Light Control
Illuminated Entry	Illumination System
Illuminated Entry	I/L ON W/Door Key Unlock
Illuminated Entry	I/L ON W/Unlock
Illuminated Entry	Illumination System with ACC OFF
Illuminated Entry	Operation of Illumination System
Illuminated Entry	Interior Light ON with Door Key Unlock
Illuminated Entry	Interior Light ON with Unlock
Warning	Light Reminder
Warning	Key Reminder Sound
Warning	Key Reminder Volume
Warning	Seat Belt Warning
Warning	Key Remind Sound
Warning	Key Remind Volume
Warning	Buzzer Length
Warning	Door Open-Close Buzzer/P

## Customized List

Customization category name	Customization name
Warning	Engine-on Door-open Buzzer/P
Warning	Push-on Door-open Buzzer/P
Warning	Carry Out Key Buzzer
Warning	Door Op/Cl Buzzer
Warning	Push-on Door-close Buzzer
Warning	Key No Fit Warn Buzzer
Warning	Key Battery Warn Buzzer
Warning	Key Inside Lock Buzzer
Warning	Half Lock Buzzer
Warning	Smart Buzzer Volume
Warning	Smart Buzzer Number
Warning	Fr & Rr Buzzer Volume
Warning	Fr & Rr Buzzer Frequency
Warning	Keep Sense Status Buzzer
Warning	Rear Buzzer Onset Range
Warning	Front Buzzer Onset Range
Warning	No Move Judgment Buzzer
Warning	Key Left in Vehicle Buzzer
Warning	Lock Door in E/G Idling Buzzer
Warning	Passenger Take Key
Warning	Key Taken Warning (w/o P range)
Warning	Key Taken Warning (w/P range)
Warning	Number of Warning Buzzer Sound
Warning	Key Out Range Warning
Warning	Key Low Battery Warning
Light Control	Light Auto OFF Delay
Light Control	Control Type
Light Control	Sensitivity
Light Control	Response Time
Light Control	Disp Ex OFF Sen
Light Control	Disp Ex ON Sen
Light Control	Foot Light Time(Driver's Side)
Light Control	Foot Light Time(Passenger's Side)
Light Control	Light Control Type
Light Control	R Foot Light T
Light Control	L Foot Light T
Others	R-Shade Delay T
Light Control	DRL Function
Light Control	Turn ON Luminous Intensity
Others	Rear Sunshade Reverse Control
Light Control	Display Extinction Release Luminous Intensity
Light Control	Display Extinction Luminous Intensity
Tilt & Telesco	Autoaway/Return function
Slide Roof	Door Key Related Open
Slide Roof	Door Key Related Close
Light Control	Foot Light T

## Customized List

Customization category name	Customization name
Slide Roof	Wireless Key Related Open
Slide Roof	Wireless Key Related Close
Slide Roof	Door Key Related Operation
Slide Roof	Wireless Key Related Operation
Air Conditioner	Set Temperature Shift
Air Conditioner	Evaporator Control
Air Conditioner	Step Motor Initializing (IG/off)
Air Conditioner	Air Inlet (PSW/LOCK) operation
Air Conditioner	Compressor/Air Inlet DEF operation
Air Conditioner	Compressor Mode
Air Conditioner	Air Inlet Mode
Air Conditioner	Emission Gas Sensor Shift
Air Conditioner	Swing Resister Auto Mode
Air Conditioner	Foot/DEF Auto Mode
Air Conditioner	Foot Air Out Operation
Air Conditioner	Foot/DEF Automatic Blow Up Function
Air Conditioner	Foot Air Leak
Air Conditioner	Filter Sensor
Air Conditioner	Button Press Buzzer
Air Conditioner	Ambient Temperature Shift
Sensor	Front Side Dist Sensor
Sensor	Sensor Condition N Range
Sensor	Non P/R Range Sensor
Sensor	Reverse Range Sensor
Sensor	Rear Sensor
Display	Sonar Display OFF Time
Display	Display Timeout Time
Display	Approach Display OFF
Unit conversion	Units By Region
Retractable Hardtop	Operation Condition
Smart Key / Access	Smart Ignition
Smart Key / Access	Smart Trunk
Smart Key / Access	Transmit Interval
Smart Key / Access	Parking Wait Time
Smart Key / Access	Smart Trunk Key Inside
Smart Key / Access	Park Wait Time
Smart Key / Access	Ignition Available Area
Smart Key / Access	Door Unlock Mode
Smart Key / Access	Back Door Opening Operation
Smart Key / Access	Key in Trunk detected
Smart Key / Access	Trunk Open Mode
Compass Calibration	Compass Calibration
PSD & PBD operation	Wireless PSD Operation (RR)
PSD & PBD operation	PSD Buzzer Volume (RR)
PSD & PBD operation	PSD SW Operation (RR)
PSD & PBD operation	Wireless PSD Operation (RL)

## Customized List

Customization category name	Customization name
PSD & PBD operation	PSD Buzzer Volume (RL)
PSD & PBD operation	PSD SW Operation (RL)
PSD & PBD operation	PBD Assist Open
PSD & PBD operation	PBD Assist Close
PSD & PBD operation	Wireless PBD Operation
PSD & PBD operation	PBD Buzzer Volume
PSD & PBD operation	PBD SW Operation
TVSS	Garage Mode
TVSS	IG Door Lock
TVSS	Piezo Buzzer Defeat
Seat	Headrest Control
Illuminated Entry	Seat Light Control
Illuminated Entry	Steering Light Control
Illuminated Entry	Shift Light Control
Illuminated Entry	Foot Lights Set Up
Others	Reverse Output ResponseTime
Security	Warn by Self Power Siren
Power Window	Up/Smart
Display	Display Mode
Sensor	Sonar Mode
Air Conditioner	Rear A/P HI Set
Illuminated Entry	Exterior Foot Light Control
Illuminated Entry	Exterior Foot Light Lighting Time
PSD & PBD operation	PBD One Motion
Door Lock	Entry Delay Time
Door Lock	Auto Lock/ Shift not P
Air Conditioner	Plasmacluster Mode Conversion
Warning	Fr Sensor Onset Range
Warning	Rr Sensor Onset Range
Warning	Keep Sense Buzzer
Warning	Fr & Rr Buzzer Freq
Sensor	Sensor Condition N
Sensor	Reverse Range Front Sensor
Sensor	Non P/R Range Rear Sensor
PSD & PBD operation	PSD Buzzer (RR)
PSD & PBD operation	PSD Buzzer (RL)
Slide Roof	Door Handle Lock Button
Door Lock	Auto Lock/Shift
Door Lock	Auto Unlock/Shift
Power Window	P/W Up W/ Smart
Others	Rear Shade Delay Time
Others	R-pos to Rear Sun Shade COM
Warning	Driver Side Seatbelt Warning Buzzer
Warning	Front Passenger Side Seatbelt Warning Buzzer
Illuminated Entry	Room Light when Aprchd
Illuminated Entry	Inside Foot Light

## Customized List

Customization category name	Customization name
Illuminated Entry	Center Console Spot Light
Illuminated Entry	Out-Handle-Lgt Approached
Illuminated Entry	Out-Handle-Lgt Unlocked
Illuminated Entry	Out-Handle-Lgt w/Master SW
Illuminated Entry	Mirr-Foot-Lgt Approached
Illuminated Entry	Mirr-Foot-Lgt Unlocked
Illuminated Entry	Mirr-Foot-Lgt w/Master SW
Illuminated Entry	S-Belt-Bkl-Lgt/Door Open
Illuminated Entry	S-Belt-Bkl-Lgt/ACC OFF
Illuminated Entry	Mirror Foot Light Time
Wireless Door Lock	Wireless Auto Lock
Others	Mirror Return DoorLock
Others	Mirror Return ACC
PSD & PBD operation	PBD Power Operation
Seat	Slide Link Cushion Length Ctrl
Seat	Slide Link Hdrest Length Ctrl
Option Setup	Security System
Security	Passive Mode (Security system)
Security	Entry Delay
Air Conditioner	Air Purifier Auto Cancel
Seat	P-Seat Auto Pattern
Seat	Relax with P-Seat Lift
Display	Language
Seat	Ottoman Return Position
Seat	Relax with P-Seat Slides
Seat	Relax with Ottoman Up
Seat	Return with Passenger Seat
Wireless Door Lock	Wireless Glass Hatch Open
PSD & PBD operation	PBD Buzzer
Air Conditioner	Oxygen Supply
Air Conditioner	Add Foot Air in FACE Mode
Power Window	Door Key Linked Back P/W UP
Power Window	Door Key Linked Back P/W DOWN
Wiper	Linked Rear Wiper Washer
Wiper	AutoRear Wiper In Reverse
Wiper	AutoRear Wiper In Reverse Freq
Wiper	Rear Wiper Washer Function
Wiper	Rear Rewipe Function
Wiper	Rear Wiper Adaptive Spd Cntrl
Smart Key / Access	Glass Hatch Open Operation
Display	ECO Drive Indicator
Air Conditioner	Air Conditioner Mode
Air Conditioner	Defogger Control
Warning	Rear Seatbelt Warning Buzzer
Air Conditioner	ECO MODE Cancel
Air Conditioner	Noise and Vibration Reduction



## Customized List

Customization category name	Customization name
PSD & PBD operation	PBD Close SW Waiting Time
PSD & PBD operation	PBD Close SW Press Condition
PSD & PBD operation	Door Unlock with 1 Motion.
PSD & PBD operation	One Motion
PSD & PBD operation	One Motion with Unlock Door
Power Window	P Window Auto Up
Power Window	P Window Auto Up From Driver
Power Window	RR Window Auto Up
Power Window	RR Window Auto Up From Driver
Power Window	RL Window Auto Up
Power Window	RL Window Auto Up From Driver
Display	ECO Drive Indicator Light
Warning	Reverse Buzzer
Wireless Door Lock	P/W Wireless Ope Buzz
Light Control	Automatic High Beam
Illuminated Entry	Interior Light Control
Illuminated Entry	Exterior Light Control
Air Conditioner	Start PreA/C
Air Conditioner	Stop PreA/C
Security	Intrusion Win Opened
Seat	Seat Move Distance
Smart Key / Access	Seat position/Tilt & Telesco memory recall setting
Others	Auto Fold Mirror
Retractable Hardtop	Intuitive P/A Interlock
Retractable Hardtop	Flasher Relay
Power Window	Close ALL P/W Function
Light Control	Lane CHG Flash CNT
PSD & PBD operation	Smart Back Door P/W Up
PSD & PBD operation	Smart Back Door P/W Down
PSD & PBD operation	Smart Back Door P/W ON Time
Wiper	Rear Wiper Interval Speed
Wiper	Rear Wiper Retract Time
PSD & PBD operation	Back Door P/W UP when half-shut
PSD & PBD operation	Wireless PSD SW Operation(RR)
PSD & PBD operation	Outside PSD SW Operation(RR)
PSD & PBD operation	Wireless PSD SW Operation(RL)
PSD & PBD operation	Outside PSD SW Operation(RL)
Smart Key / Access	Door Unlock Mode2
Illuminated Entry	Scuff Plate Lamp linked to Smart
Illuminated Entry	Scuff Plate Lamp linked to Wireless Key
Illuminated Entry	Scuff Plate Lamp linked to D-Door Unlock SW
Illuminated Entry	Scuff Plate Lamp linked to Door open
Others	Body Ctrl with Torque Demand
Display	Tacho Meter Mode
Air Conditioner	Air Purifier
PSD & PBD operation	PBD Assist Open Operation



## Customized List

Customization category name	Customization name
Illuminated Entry	Step Light Lighting Time
Retractable Hardtop	Hardtop Operation Speed
Smart Key / Access	Touch Activation Over Threshold